

Installation instruction do88 performance Turbo muffler delete for AUDI SEAT SKODA VW 1.8 / 2.0 TSI (MQB)

Part number: CP-110

This instruction shows how to replace the OEM turbo muffler with do88 performance turbo muffler delete.

At this type of installation we always recommend that you have mechanical experience and knowledge about safety during work on vehicles.

Parts included:

1. do88 Turbo muffler delete
2. Silicone hose
3. 2pcs Hose clamps




This installation instruction are written according to our installation of this turbo muffler delete performed on a VW Golf GTI MY-14. Other vehicles that this turbo muffler delete also fit to might have some differences in the way of installation.




1. Disconnect both battery terminals. Also remove the battery bracket 1x Hex 13mm screw and then remove the battery from the car.




2. Remove the air filter box. Remove hose clamp, vacuum hose, SAI-connection (if your car has it). Then pull the air filter box upwards (it can sit quite hard in its rubber bushings).

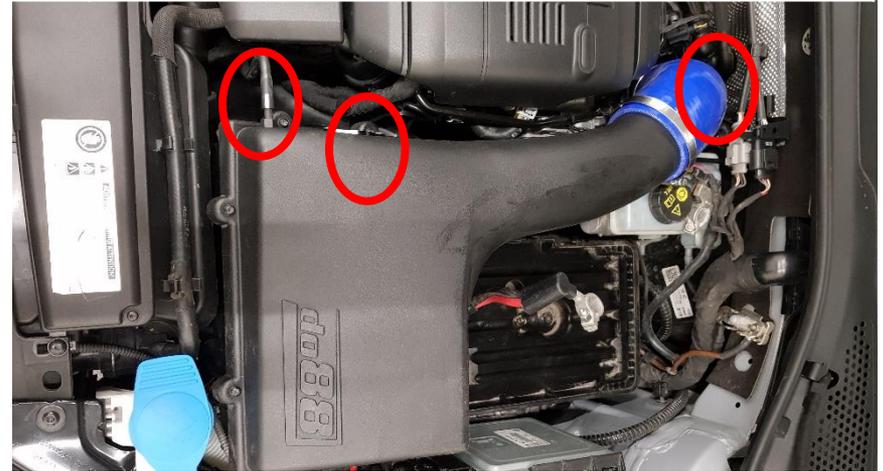

3. If you have OEM intercooler pipes: Loosen 1x Torx T30 screw at the pressure pipe bracket and remove the hose at the turbo outlet. Also disconnect the small plastic box from it bracket on the battery tray. Gently pull away the pipe now to make space at the turbo outlet.
If you have do88 intercooler pipes: Remove the turbo outlet silicone hose.

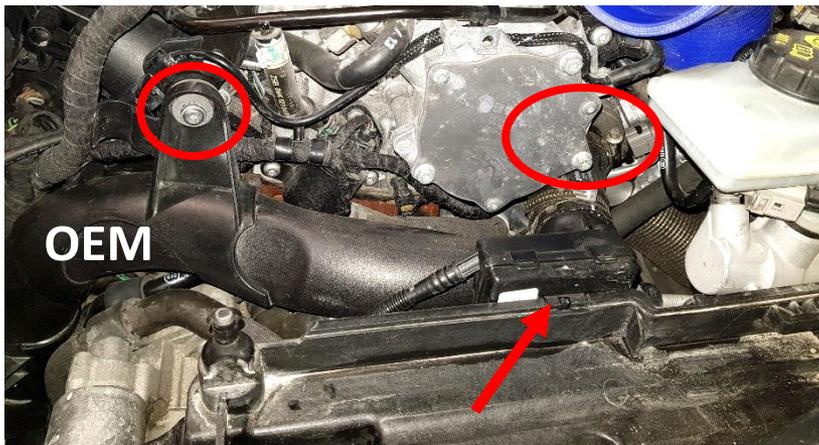

4. Remove 3x Allen screw 5mm.

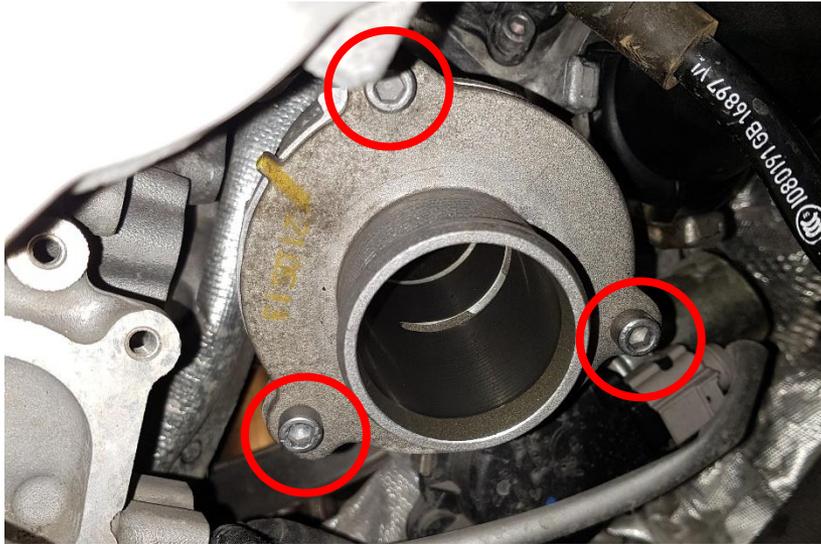

5. Check that the O-ring still sits correctly in the turbo housing.



6. Install the do88 turbo muffler delete with the screws removed in step 4.



7. Install the included silicone hose and hose clamps in-between the turbo muffler delete and the intercooler pipe. Install all other parts in reverse order.

